AS HOLDBACKS

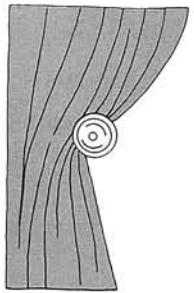

Without tiebacks
Arrange fabric behind disc. Do not use with very wide panels.

With tiebacks
Attach window side hook to one end of tieback. Wrap around panel and attach other end to room side hook.

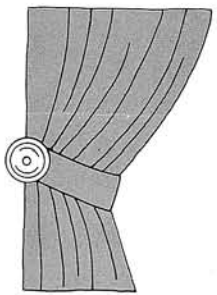

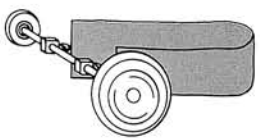

TO COVER METAL HOLDBACK WITH FABRIC

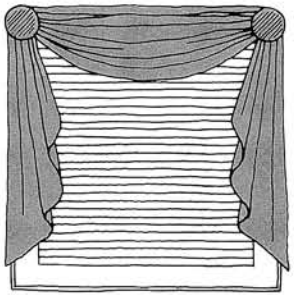

covered button

uncovered button



Cut 12″ fabric square. If button is to show, make ¼″ hole in center; attach button through hole.

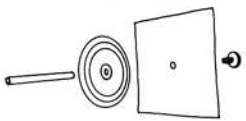

Wrap face of holdback and secure with plastic tie. Adjust fabric, then cut away excess.

Push plastic disc on stem. Secure with adapter.



Plastic tie, and disc are included in 5460 (white & black only).

TO MAKE SCARVES

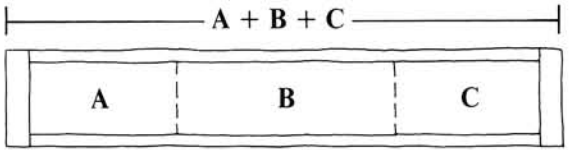

Use a ready-made scarf or one you sew. Fabric width may be from 40″ to 60″. If sewing, make 1″ side and 5″ tail hems.

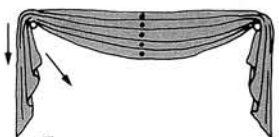

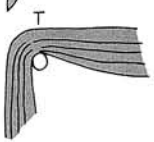



Tails may be even or uneven. Tails may flare.

1. Mark centers of opening and scarf.
2. Fold fabric; lay over stems. Adjust tail to proper length.
3. Adjust swag by pulling fabric to center. Arrange folds.
4. Insert pin through hole in stem or adapter.
5. Attach disc to stem.

AS SCARFHOLDERS

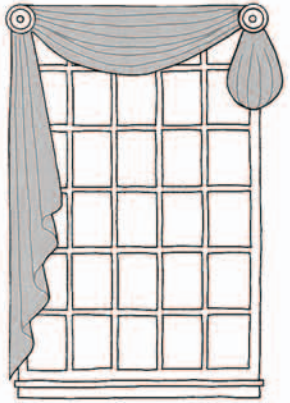

Arrange fabric with one long and one short tail. Pull short tail back up and tuck into swag.

Use two separate swags. Arrange one across two end holders. Put the other over all three holders.

ASSEMBLY



Pencil mark for top hole in base.

Metal stem
Use included wall anchor for top screw (make ¼" hole). Use screw in bottom hole.
Use one or both stem sections with connector. Slide on hooks for tiebacks or scarves.

plastic or metal

Molded stem
Use screws or purchase wall anchors.
Use stem or add extension section. Slip on hooks for tiebacks.

Kirsch™
ELEGANCE DEFINED

A Division of
Newell Rubbermaid

©1999 ™ and ®, Reg. TM, Newell Rubbermaid, Freeport, IL 61032

632033

SCARFHOLDER/HOLDBACK

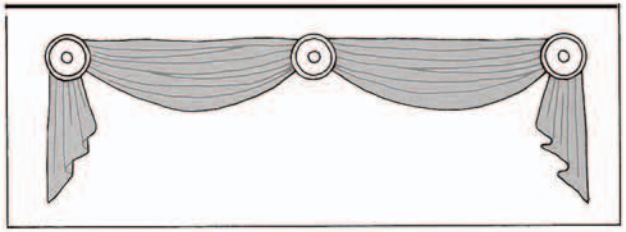

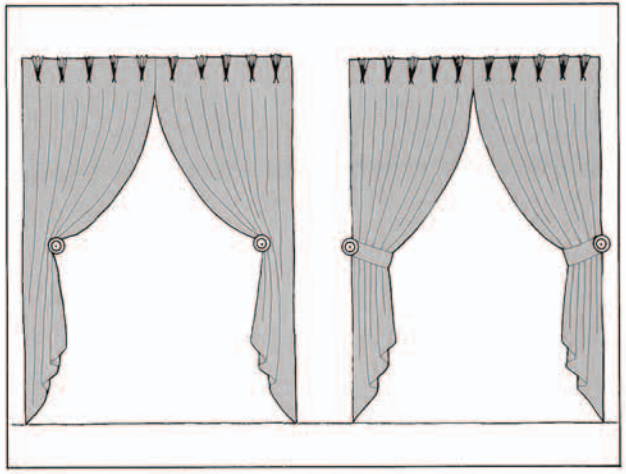

VERSATILE, PRACTICAL AND PRETTY ACCENTS

Kirsch™
ELEGANCE DEFINED

Installation Instructions:
Instructions de pose:
Instrucciones de Instalación:

Recommended for use as scarfholder or swagholder only.

Recommandè uniquement comme support pour les draperies ou les festons.

Se recomienda usar sólo como sujetadores de festón.

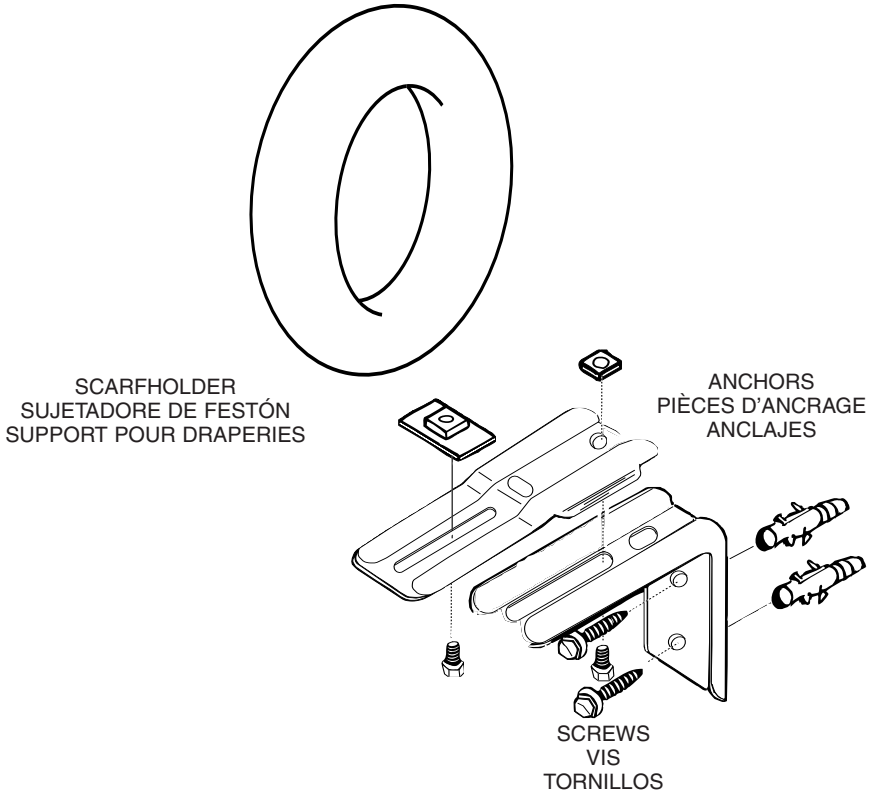

Kirsch
ELEGANCE DEFINED

☎ **1-800-817-6344**
www.kirsch.com

Exported by/Exporté par/Exportado por: Kirsch • Freeport, IL 61032 USA

Imported by/Importé par/Importado por: Kirsch • Prescott Ontario, KOE1TO Canada

Imported by/Importé par/Importado por: Newell Group Mexico

Made in China • Fabriqué en Chine • Hecho en China

A Division of
Newell Rubbermaid

©1999 ™ and ®, Reg. TM, Newell Rubbermaid, Freeport, IL 61032

Installation Instructions:
Instructions de pose:
Instrucciones de Instalación:

Recommended for use as scarfholder or swagholder only.

Recommandè uniquement comme support pour les draperies ou les festons.

Se recomienda usar sólo como sujetadores de festón.

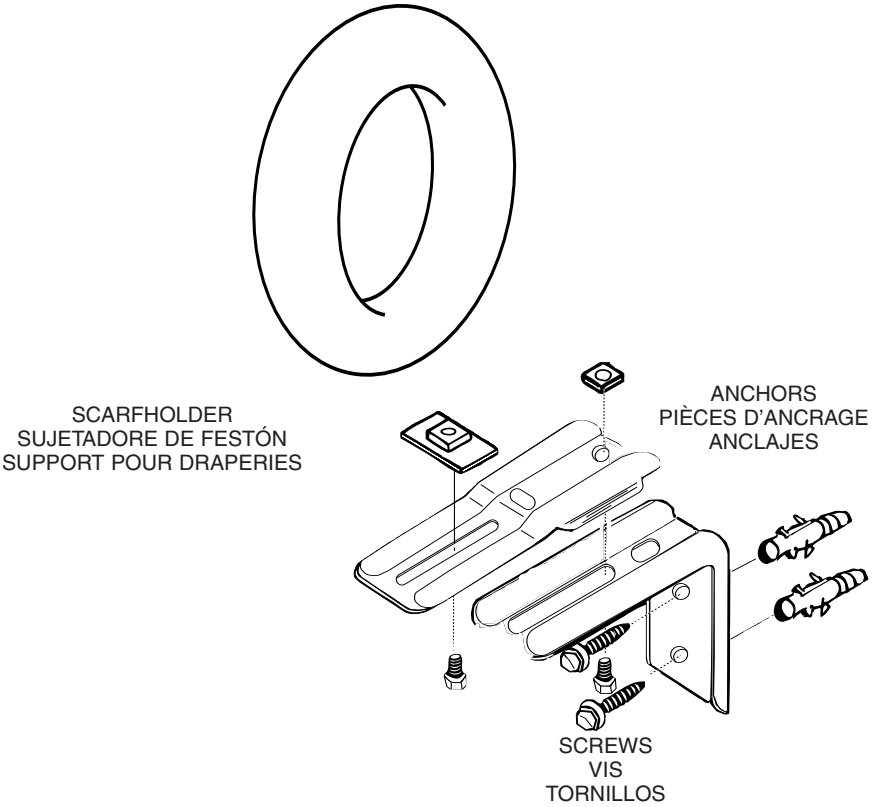

Kirsch
ELEGANCE DEFINED

☎ **1-800-817-6344**
www.kirsch.com

Exported by/Exporté par/Exportado por: Kirsch • Freeport, IL 61032 USA

Imported by/Importé par/Importado por: Kirsch • Prescott Ontario, KOE1TO Canada

Imported by/Importé par/Importado por: Newell Group Mexico

Made in China • Fabriqué en Chine • Hecho en China

A Division of
Newell Rubbermaid

©1999 ™ and ®, Reg. TM, Newell Rubbermaid, Freeport, IL 61032

Installation Instructions

Decorative Sconce

1. Position decorative sconce at desired location.
2. Turn screws counter-clockwise 1/4 turn and remove plate from back of decorative sconce.
3. Mount metal bracket (see figure) using supplied screws or hollow wall anchors if wall studs cannot be found.
4. Slide decorative sconce over metal bracket.

Instructions de pose

Bras de Lumière Décoratif

1. Placer le bras d'applique décoratif à l'endroit désiré.
2. Visser les vis d'un quart de tour (sens antihoraire) et retirer la plaque de l'endos du bras d'applique décoratif.
3. Installer le support métallique (illustration) au moyen des vis fournies ou de pièces d'ancrage pour mur creux s'il n'est pas possible de trouver de poteau mural.
4. Insérer le bras d'applique décoratif dans le support métallique.

Instrucciones de Instalación

Candelabro Fijo Decorativo

1. Coloque el aplique decorativo en el lugar deseado.
2. Gire los tornillos 1/4 de vuelta en dirección contraria a las agujas del reloj y quite la placa de la parte posterior del aplique decorativo.
3. Instale el soporte de metal (vea la figura) utilizando los tornillos que se suministran o para pared hueca si no puede encontrar los postes murales.
4. Deslice el aplique decorativo sobre el soporte de metal.

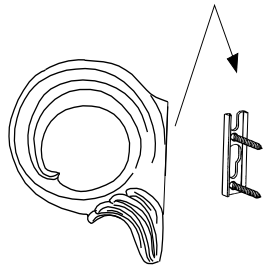

Vertical mount bracket
Support à installation verticale
Soporte de montaje vertical

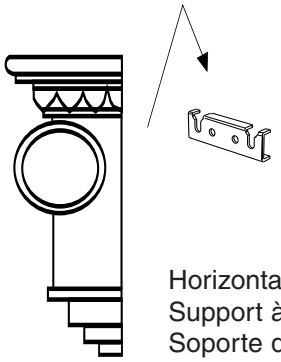

Horizontal mount bracket
Support à installation horizontale
Soporte de montaje horizontal

Kirsch™ ELEGANCE DEFINED

A Division of Newell Rubbermaid

☎ 1-800-817-6344
Consumer Hot Line

Ligne d'assistance à la clientèle

Linea Especial para el Consumidor

4/00